







The patented adjustable screw replaces shimming and can make door hanging a one person job.

Ideal for anything where you need precise adjustments. Windows, Ceilings, Doors, Floors and Cabinets


Easy 4 Step Wood to Wood Installation

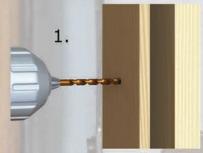


1. Predrill window frame/ door jamb (only) with 5/16" drill bit.

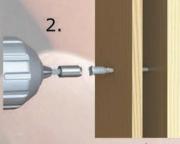

2. Engage crown bit into TopStar™ screw head and drive flush to surface of frame or jamb.

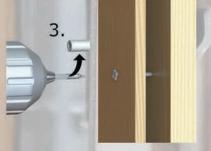

3. For adjustments remove crown from bit.

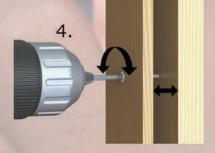

4. Engage bit into center hole of TopStar™ screw head and adjust to your requirements.



Available in 2-1/2" and 3-1/8" length.

Crown Bit

TOPSTAR TM SCREW